

LI-101 User manual

LI-101



www.liden-weighing.com

Display specification:

Display type:	LCD display with LED backlight. 6 digits, height 25,4 x 10 mm.
Display functions by setup:	Peak Hold function.
	Zero recall function.
	Weight accumulation.
	Animal mode with different filter levels.
Indicator marks:	Zero, Tare, Motion, M+, Gross, Pre-Tare, Range 1, Range 2,


Power requirement:

Adapter specification:	Input: 120/230V AC 50 ~ 60Hz Output: 9V / 1000mA
Built in battery:	6V Ni-MH / 1800mAh, rechargeable battery pack
Continues operation time:	Minimum 15 hours continues use

General:

Operating temperature:	0°C to 40°C
Operating humidity:	< 85%RH Max. (Non-condensing)


Bakstycke:

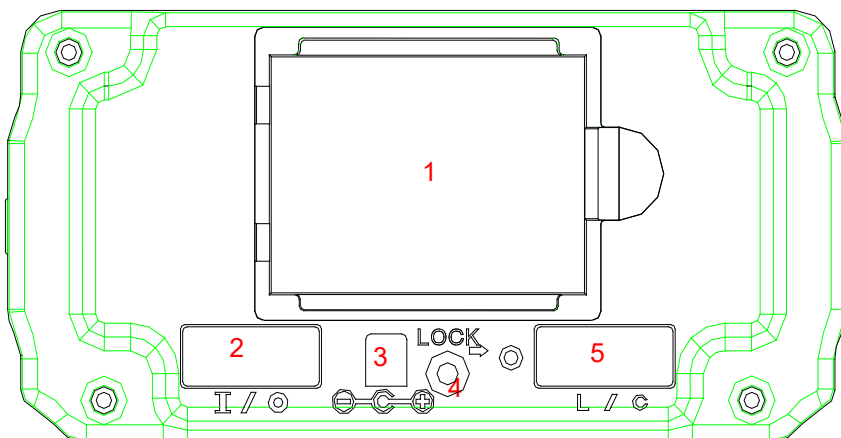

1. Battery case
2. RS-232 (option)
3. DC 9V power input
4. Calibration switch
5. Loadcell connector

Instrumentpanel:

Frontpanel:

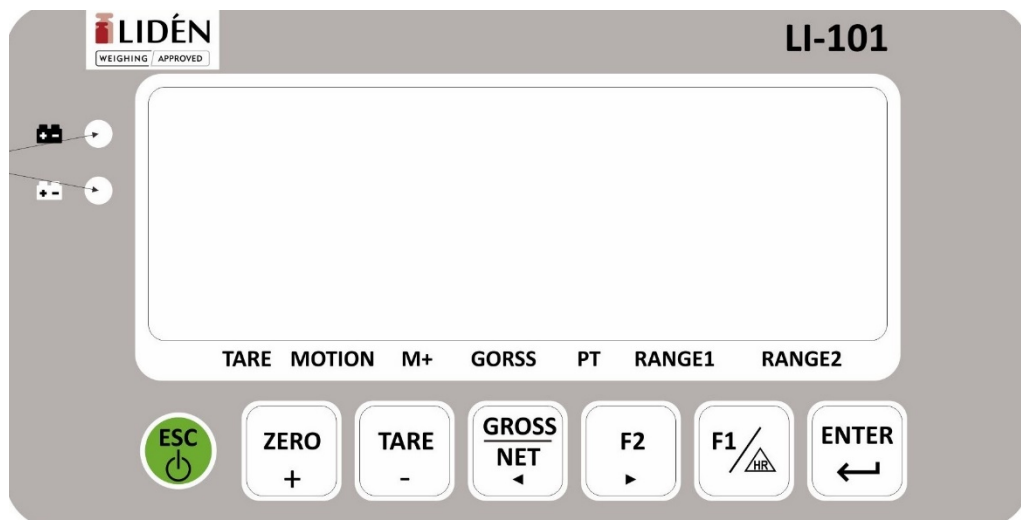








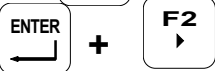
Indication:

	:	Battery charged status
	:	Battery charged status
TARE	:	Tare mode
MOTION	:	Unstable weighing indication
M+	:	Accumulation mode indication
GROSS	:	Gross weight
PT	:	Pre-Tare (only some models)
RANGE1	:	Dual-range resolution 1 (only some models)
RANGE2	:	Dual-range resolution 2 (only some models)


Notes about charging the NiMH (Nickel-Metal Hydride) battery:

Status	LED description
Ready to charge	Once the scale is connected with AC power mains, the green and red LEDs will be inter-flashing for 3 seconds as a self-diagnosis.
During charging	The red LED will be ON.
Finish charging	The green LED will be ON.
Battery fault	The green and red LEDs keep inter-flashing without stopping.
Without battery	The red LED will be ON.
Battery voltage is below	The green and red LEDs keep inter-flashing without stopping.



Keys:

	1) Power ON / OFF. Press and hold this key for 3 seconds to shut down. 2) Abort or exit when setting.
	1) Weight rezero. 2) Increase the flash value by one when setting.
	1) Eliminate the gross weight. 2) Decrease the flash value by one when setting.
	1) Switch Gross / Net weight shown on display. 2) Move the cursor leftward when setting.
	1) M+, accumulate weight to memory. 2) Move the cursor rightward when setting.
	Shows total number of accumulations and total weight.
	Enter key.
	MC, clears accumulation memory.




Power ON:



- Make sure that there is nothing on the forks.
- Start the scale by pressing 

Tare – Gross / Net weight:

- Place tare on the scale and press  net weight will be shown.
- To change between net- and gross weight, press 

Weight accumulation:

- Place the first item on the scale and press 
- Place the next item on the scale and press 
- Repeat above until all the items are registered.
- To ready the total number of weighings and the total weight press 

To clear the weight memory, press  and  at the same time.

Error message:

- | | |
|-----------|---|
| (1) Err 0 | Load Cell or A/D circuit is abnormal. |
| (2) Err 2 | Real weighing value is lower than or equal to zero value. |
| (3) Err 6 | Internal resolution is lower than 0.15 μ V/d range. |
| (4) Err. | Incorrect password. |
| (5) E 1 | Internal value is higher than zero range. |
| (6) E 2 | Internal value is lower than zero range. |